



Technical Assistance: (800)257-5911 or (215)766-2670

Email: info@scaletonscales.com

Model 4042™ Spill Containment Scale Base

(PN: 4042- (enter size of base) – (enter net capacity in LB or KG):

Assembly and Start Up Instructions:

Before assembly, take note of the scale base and indicator serial numbers. The scale base and indicator serial numbers must match each other for proper operation! If configured with dual channel indicator: Ch 1 = blue heat shrink tubing, Ch 2 = yellow heat shrink tubing. Refer to controller installation instructions for guidance on wiring. Do not loosen or move load cell. The Model 4042™ Spill Containment Scale is assembled and calibrated to the digital controller at the factory, then partially disassembled for shipment. **Depending on size of containment basin, sometimes they are shipped direct from the manufacturer and will arrive separate from scale base and controller.**

Set up and Wiring:

Step 1: Remove all parts from box and inspect for damage – bent metal, broken wires, cracks in indicator, etc. **Any shipping damage must be reported to carrier!**

Parts Bag Contains: (strapped to scale base)

- 4) leveling feet w/ jam nuts

Step 2: Install Leveling feet. **The leveling feet have been removed for shipping to prevent damage or loss.**

You must install these (4) leveling feet into the load cells before placing base right-side-up. Make sure the nut is far enough down on the foot so that you can screw the foot into the base, and then use the feet to make solid contact with floor.

Step 3: Place the scale on a solid, dry, and even surface. Clear the area of all debris where the scale base will be set up. The “foot” that is in the load cell is adjustable with a nut to tighten. Use the nut to tighten the foot so that it cannot move.

Step 4: If conduit is to be used, we recommend at least 2 feet of horizontally mounted, FLEXIBLE conduit as to not interfere with free movement of the base for accurate measurement. Feed the wire up through the conduit, and apply a fitting.

*****See controller manual for rest of set-up and operating instructions.*****

Replacement Parts:

PN: **SB/SS-** (enter load cell value) –**LC** : replacement load cell & shim

PN: **4042LF** : leveling foot & jam nut for Model 4042WB scale base

PN: **4042-CB26** : 26” Replacement Spill Containment Basin (11 gal)

PN: **4042-CB26x52** : 26”x52” Replacement Spill Containment Basin (22 gal)

PN: **4042-CB52x52** : 52”x52” Replacement Spill Containment Basin (44 gal)

PN: **4042-CB63x63** : 63”x63” Replacement Spill Containment Basin (365 gal)